

| CD Players | DAC Chips |
|-------------------------|--------------------------|
| ACOUSTIC RESEARCH CD-07 | SAA7220 (digital filter) |
| ACCUPHASE DAC10 | 2x AD1853 |
| ACCUPHASE DAC20 | 2x AD1955 |
| ACCUPHASE DC801 | 8x AD1955 |
| ACCUPHASE DP55V | AD1853 |
| ACCUPHASE DP57 | 2x PCM1796 |
| ACCUPHASE DP65 | 8x PCM1702 (4/ch) |
| ACCUPHASE DP67 | 4x AD1955 |
| ACCUPHASE DP78 | 6x AD1955 |
| ACCUPHASE DP85 | 6x AD1853 |
| ACCUPHASE DP90 | PCM63 |
| ACCUPHASE DP500 | 4x PCM1796 |
| ADC CD 250XR | PCM54 |
| AKAI CD26 | TDA1543A |
| AKAI CD37 | PCM67P |
| AKAI CD55 | AD1856 |
| AKAI CD57 | PCM67P-J |
| AKAI CD69 | PCM63 |
| AKAI CD73 | PCM56 |
| AKAI CD93 | PCM56 |
| AKAI CD-M839 | PCM56 |
| ALBA CD420 | PCM54 |
| ALCHEMIST NEXUS APD32A | 2x TDA1549 |
| AMC CD60 | PCM1716 |
| AMC CD8A | MN6474 (Technics MASH) |
| AMC CD8B | PCM1716 |
| ANTHEM CD1 | PCM1702 |
| ARCAM ALPHA | TDA1541A |
| ARCAM ALPHA 5 | TDA1541 |
| ARCAM ALPHA 5 PLUS | TDA1541A |
| ARCAM ALPHA 6 | SM5864 |
| ARCAM ALPHA 7 | PCM1710 |
| ARCAM ALPHA 7SE | PCM1716 |
| ARCAM ALPHA 8 | SM5864AP |
| ARCAM ALPHA 9 | dCS RingDAC |
| ARCAM ALPHA PLUS | TDA1541A |
| ARCAM CD72 | PCM1716 |

| | |
|---------------------------|----------------------------|
| ARCAM CD92 | dCS RingDAC |
| ARCAM DELTA 70.2 | TDA1541A S1 (single crown) |
| ARCAM DELTA 70.3 | SAA7350 |
| ARCAM DELTA 110 | 2x SAA7321 (1/ch) |
| ARCAM DELTA 110.2 | 2x PCM67P-J (Sync Lock) |
| ARCAM DELTA 270 | PCM69 |
| ARCAM DELTA BLACK BOX 1 | TDA1541A |
| ARCAM DELTA BLACK BOX 2 | TDA1541A |
| ARCAM DELTA BLACK BOX 3 | 4x SAA7321 (2/ch) |
| ARCAM DELTA BLACK BOX 5 | 2x PCM67PJ (Sync Lock) |
| ARYE CX-7 | PCM1738 |
| ARYE D-1 | PCM1704 |
| AUDIO ALCHEMY ENGINE v3.0 | AD1862 |
| AUDIO ANALOGUE MAESTRO | AD1855 |
| AUDIO INNOVATIONS ALTO | PCM1716 |
| AUDIO NOTE CD-1 | PCM1710 |
| AUDIO NOTE CD-2 | AD1865 |
| AUDIO NOTE DAC-3 | PCM63 |
| AUDIO RESEARCH CD1 | SAA7341 |
| AUDIOLAB 8000 CD | CS4329 |
| AVI SC2000MC | PCM63 |
| BLAUPUNKT CP2650 | PCM54 |
| BLAUPUNKT CP2990 | PCM56P |
| CAMBRIDGE AUDIO CD1 | TDA1541 |
| CAMBRIDGE AUDIO CD2 | 4x TDA1541 |
| CAMBRIDGE AUDIO CD3 | TDA1541A |
| CAMBRIDGE AUDIO CD4SE | CS4327 |
| CAMBRIDGE AUDIO CD6 | TDA1305T |
| CAMBRIDGE AUDIO D500 | CS4327 |
| CARVER SD/A 450 | MN6474 |
| CARVER TL-3100 | LC7881 |
| C.E.C. 530CD2 | Y3015 |
| C.E.C. 680CD | LC7881 |
| CONDOR CD950 | YM3020 |
| CONSONANCE CD 120 | CS4396 |
| COPLAND CDA277 | PCM63 |
| COPLAND CDA288 | PCM63-K |
| CREEK CD50 MKII | CS4396 |
| CROWN AVC-9500 | AD1864 |

| | |
|------------------|-------------------|
| CROWN CD2111R | LC7881 |
| CYRUS CD7 | PCM1716 |
| CYRUS dAD1 | TDA1311 |
| CYRUS dAD3 | TDA1305 |
| CYRUS dAD3Q | AD1861 |
| CYRUS dAD7 | AD1861 |
| DENON DA-500 | PCM1702 |
| DENON DCD-435 | PCM1716E |
| DENON DCD-480 | PCM61 |
| DENON DCD-485 | PCM1735 |
| DENON DCD-500 | PCM54 |
| DENON DCD-580 | PCM67P |
| DENON DCD-590 | PCM61 |
| DENON DCD-610 | 1x PCM56P-L (S/H) |
| DENON DCD-615 | PCM61P |
| DENON DCD-635 | PCM61P |
| DENON DCD-650F | PCM1700P |
| DENON DCD-655 | PCM1702 |
| DENON DCD-660 | 2x PCM61 |
| DENON DCD-680 | PCM69A |
| DENON DCD-685 | PCM1702 |
| DENON DCD-690 | PCM61 |
| DENON DCD-695 | PCM61 |
| DENON DCD-700 | PCM54HP |
| DENON DCD-725 | PCM61P-L |
| DENON DCD-735 | PCM61 |
| DENON DCD-755AR | PCM1702 |
| DENON DCD-800 | PCM56 |
| DENON DCD-810 | PCM56P |
| DENON DCD-820 | PCM56 |
| DENON DCD-890 | PCM61P |
| DENON DCD-920 | PCM61 |
| DENON DCD-980 | PCM61P |
| DENON DCD-1015 | PCM61P |
| DENON DCD-1100 | PCM53JP-V |
| DENON DCD-1400 | PCM56 |
| DENON DCD-1420 | PCM54HP |
| DENON DCD-1450AR | PCM1702 |
| DENON DCD-1460 | PCM61P |

| | |
|-----------------------|-------------|
| DENON DCD-1500 | PCM54HP-K |
| DENON DCD-1500mk2 | PCM56P-J |
| DENON DCD-1520 | PCM64 |
| DENON DCD-1530 | PCM61 |
| DENON DCD-1550R | PCM61 |
| DENON DCD-1550AR | PCM61P |
| DENON DCD-1560 | PCM1701 |
| DENON DCD-1650R | PCM1702 |
| DENON DCD-1800 | PCM53 |
| DENON DCD-2560 | 4x AD1862 |
| DENON DCD-2700 | 4x PCM1702J |
| DENON DCD-S10/3000 | PCM1702J |
| DENON DCD-3300 | PCM56P-K |
| DENON DCD-3520 | PCM64 |
| DENON DCD-3560 | PCM58P-K |
| DENON DCD-S1 | PCM1702 |
| DENON DCM-280 | PCM1748 |
| DENON RCD-100 | PCM1710 |
| DENON UCD-F10 | PCM61 |
| DIORA CD-502 | TDA1543 |
| DUAL CD130 | CX20017 |
| DUAL CD20 | PCM53 |
| EXPOSURE CD | TDA1545A |
| EZO FOG STAGE3 | AD1853 |
| FISCHER AD935 | LC7881 |
| FISCHER Z1 | PCM58 |
| GRUNDIG CD103 | LC7881 |
| GRUNDIG CD9000 | TDA1541A |
| GRUNDIG FINE ARTS CD1 | SAA7314GP |
| HARMAN KARDON HD200 | YM3020 |
| HARMAN KARDON HD500 | PCM53 |
| HARMAN KARDON HD710 | MN6474 |
| HARMAN KARDON HD720 | PCM1710 |
| HARMAN KARDON HD730 | SAA7350 |
| HARMAN KARDON HD740 | PCM1702U |
| HARMAN KARDON HD750 | PCM1732 |
| HARMAN KARDON HD760 | PCM1702 |
| HARMAN KARDON HD7225 | MN6474 |
| HARMAN KARDON HD7300 | PCM61 |

| | |
|--------------------------|-----------------------|
| HARMAN KARDON HD7325 | MN6474 |
| HARMAN KARDON HD7525 | PCM61P |
| HELIOS MODEL1S | CS4328 (36 bit, ETNA) |
| HELIOS MODEL2S | CS4328 (36 bit, ETNA) |
| HELIOS MODEL3S | CS4328 (36 bit, ETNA) |
| HELIOS STARGATE | CS4328 (36 bit, ETNA) |
| HEYBROOK SIGNATURE | PCM67 |
| HIGH TECH GOLDFINE CX904 | YM3020 |
| JOLIDA JD-100A | PCM1716E |
| JVC XL V3 | PCM53JP |
| JVC XL V22 | PCM54 |
| JVC XL V221 | LC7881 |
| JVC XL V250BK | PCM56 |
| JVC XL V300B | PCM53JP |
| JVC XL V311BK | MN6471 |
| JVC XL V464 | MN35500 |
| JVC XL V1100 | PCM54 |
| KENWOOD DP47 | TD6720N |
| KENWOOD DP460 | TD6709N |
| KENWOOD DP850 | CX20152 |
| KENWOOD DP-880SG | PCM56P |
| KENWOOD DP1080 | LC78620E |
| KENWOOD DP1100D | CX20152 |
| KENWOOD DP1510 | PCM56 |
| KENWOOD DP2000 | CX20152 |
| KENWOOD DP2010 | PCM56P |
| KENWOOD DP2080 | LC78620E (LC78820) |
| KENWOOD DP3080 | SM5864 |
| KENWOOD DP4090 | KAN03 |
| KENWOOD DP5020 | PCM1701P |
| KENWOOD DP5090 | MN35502 JVC |
| KENWOOD DP7002 | PCM1702 |
| KENWOOD DP7020 | PCM1701P |
| KENWOOD DP7030 | CXD2552 |
| KENWOOD DP7060 | TDA1547 |
| KENWOOD DP7090 | 8x PCM1702 |
| KOREA CHINA CD 022 | KDA0316LN |
| KOREA HCD 630 | Y3015 |
| KRELL KAV280 | PCM1704 |

| | |
|----------------------|----------------------------|
| LINN GENKI | PCM1723 |
| LUXMAN D 102 | TD6709N |
| LUXMAN D 103 | PCM1701 |
| LUXMAN D 112 | 1x PCM56 (S/H) |
| LUXMAN D2 92 | LC7881 |
| LUXMAN D 373 | AD1864N-J |
| MARANTZ CD7 | TDA1541A S2 (double crown) |
| MARANTZ CD10 | TDA1547 |
| MARANTZ CD11LE | TDA1547 |
| MARANTZ CD11mkII | TDA1547 |
| MARANTZ CD14 | TDA1547 |
| MARANTZ CD15 | TDA1547 |
| MARANTZ CD16D | TDA1547 |
| MARANTZ CD17mkII | TDA1547 |
| MARANTZ CD17mkIII | PCM1716E |
| MARANTZ CD19 | SM5872 |
| MARANTZ CD34 | TDA1540 |
| MARANTZ CD38 | TDA1545 |
| MARANTZ CD40 | TDA1541A |
| MARANTZ CD42 | SAA7350 |
| MARANTZ CD43 | SM5872BS |
| MARANTZ CD45 | TDA1540 |
| MARANTZ CD48 | TDA1549 |
| MARANTZ CD50 | TDA1541A |
| MARANTZ CD52 | SAA7321GP |
| MARANTZ CD52SE | SAA7350 |
| MARANTZ CD53 | SM5872BS |
| MARANTZ CD54 | TDA1540 |
| MARANTZ CD56 | TDA1541 |
| MARANTZ CD60 | TDA1541A |
| MARANTZ CD63 | SM5872BS |
| MARANTZ CD63mkII | SM5872 |
| MARANTZ CD63mkII KI | SM5872 |
| MARANTZ CD63SE | SM5872BS |
| MARANTZ CD65 | TDA1541 |
| MARANTZ CD65mkII | TDA1541A |
| MARANTZ CD67 | SM5872 |
| MARANTZ CD67SE | SM5872 |
| MARANTZ CD67mkII OSE | SM5872 |

| | |
|--------------------------|-------------------------------|
| MARANTZ CD72 | SAA7350 |
| MARANTZ CD72mkII SE | TDA1547 |
| MARANTZ CD73 | 2x TDA1540 |
| MARANTZ CD74 | 2x TDA1540 |
| MARANTZ CD75mkII | TDA1541A |
| MARANTZ CD80 | TDA1541 |
| MARANTZ CD84 | TDA1540 |
| MARANTZ CD85 | TDA1541 |
| MARANTZ CD94 | TDA1541A |
| MARANTZ CD94mkII | 2x TDA1541A S1 (single crown) |
| MARANTZ CD95 | TDA1541A S1 (single crown) |
| MARANTZ CD99SE | TDA1541A S1 (single crown) |
| MARANTZ CD273 | TDA1541 |
| MARANTZ CD273SE | TDA1541A S1 (single crown) |
| MARANTZ CD-650 | TDA1541A S1 (single crown) |
| MARANTZ CD4000 | TDA1545 |
| MARANTZ CD5000 | TDA1549 |
| MARANTZ CD6000 | SM5872 |
| MARANTZ CD6000KI | SM5872 |
| MARANTZ CD6000OSE | 2x SM5872 |
| MARANTZ CDA94 | TDA1541 |
| MARK LEVINSON No. 36 | PCM1702 (vagy PCM1704) |
| MARK LEVINSON No. 390S | AD1853 |
| MERACUS TANTO | CS4327KS |
| MERIDIAN 208 | 2x SAA7321 |
| MERIDIAN 508 | CS4329 |
| MICROMEGA LEADER | SAA7321GP |
| MICROMEGA LOGIC | SAA7321 |
| MICROMEGA PREMIUM18 | CS4327 |
| MICROMEGA STAGE2 | SAA7321GP |
| MICROMEGA STAGE6 | TDA1305 |
| MISSION dAC5 | TDA1547 |
| MISSION dAD3 | TDA1305 |
| MISSION PCM4000 | TDA1541 |
| MINIBISHI DP109 | PCM56 |
| MINIBISHI MC5100 | PCM56 |
| MUSICAL FIDELITY A2 | YDC103 |
| MUSICAL FIDELITY DIGILOG | TDA1541 |
| MUSICAL FIDELITY E60 | YDC103 |

| | |
|----------------------------|----------------------------|
| MUSICAL FIDELITY E624 | PCM1716 |
| MUSICAL FIDELITY Tri-Vista | PCM1738 |
| MUSICAL FIDELITY X-Ray | PCM1716 |
| MYRYAD T-10 | CS4327 |
| MYRYAD T-20 | CS4327 |
| MYRYAD MC100 | CXD2565 |
| NAD 502 | MN6474AM |
| NAD 510 | SAA7350 |
| NAD 512 | MN6474 |
| NAD 522 | PCM1710 |
| NAD C541i | PCM1710 |
| NAD 5100 | PCM56 |
| NAD 5325 | LC7881 |
| NAD 5425 | MN6471M |
| NAD C520 | PCM1710 |
| NAD S500 | CS4390 |
| NAIM AUDIO CD1 | TDA1541 |
| NAIM AUDIO CD2 | TDA1541 |
| NAIM AUDIO CD3 | TDA1541 |
| NAIM AUDIO CD3.5 | TDA1305 |
| NAIM AUDIO CD5 | TDA1305 |
| NAIM AUDIO CDI | TDA1541A S1 (single crown) |
| NAIM AUDIO CDS11 | PCM1702K |
| NAKAMICHI CD PLAYER 1 | PCM1700P |
| NAKAMICHI CD PLAYER 4 | AD1864N |
| NAKAMICHI MB 4 | LC78840 |
| NAKAMICHI MB 5 | LC78840 |
| NAKAMICHI CDP 2E | TDA1541A |
| NAKAMICHI OMS 1E | PCM56 |
| NAKAMICHI OMS 4E | PCM54 |
| NAKAMICHI OMS 5E | TDA1540 |
| NAKAMICHI OMS 7E | TDA1540 |
| NAKAMICHI OMS 7E II | TDA1541 |
| NEC CD610 | PCM54 |
| ONKYO C-1E Integra | 2x TDA1547 |
| ONKYO DX-200 | CX20152 |
| ONKYO DX-704 | MN6472 (Technics MASH) |
| ONKYO DX-6430 | YM3020 |
| ONKYO DX-6470 | PCM56 |

| | |
|-----------------------|--------------------------|
| ONKYO DX-6550 Integra | TC9219 (ONKYO 8D-3170-1) |
| ONKYO DX-6570 | PCM58 |
| ONKYO DX-6620 | LC7881 |
| ONKYO DX-6850 Integra | 2x SM5861 |
| ONKYO DX-7011 | TC9237 |
| ONKYO DX-7211 | SM5874 |
| ONKYO DX-7222 | TC9268P |
| ONKYO DX-7333 | TC9268P |
| ONKYO DX-7500 | ONKYO 8S-3380-1 |
| ONKYO DX-7711 Integra | 2x SM5864AP |
| ONKYO DX-7911 Integra | 2x SM5864AP |
| ORELLE CD100 | TDA1541 |
| PARASOUND CD M839 | PCM56 |
| PARASOUND C/DP1000 | PCM67 |
| PHILIPS CD-80 | TDA1541 |
| PHILIPS CD-85M | TDA1541 |
| PHILIPS CD-94M | TDA1541 |
| PHILIPS CD-100 | TDA1540 |
| PHILIPS CD-101 | TDA1540 |
| PHILIPS CD-104 | TDA1540 |
| PHILIPS CD-200 | TDA1540 |
| PHILIPS CD-202 | TDA1540 |
| PHILIPS CD-204 | TDA1540 |
| PHILIPS CD-210 | TDA1543 |
| PHILIPS CD-300 | 2x TDA1540 |
| PHILIPS CD-303 | 2x TDA1540 |
| PHILIPS CD-304 | TDA1540 |
| PHILIPS CD-304 MkII | TDA1541 |
| PHILIPS CD-350 | 2x TDA1540 |
| PHILIPS CD-371 | TDA1541 |
| PHILIPS CD-380 | TDA1543 |
| PHILIPS CD-460 | TDA1541 |
| PHILIPS CD-465 | TDA1541 |
| PHILIPS CD-471 | TDA1541 |
| PHILIPS CD-472 | TDA1541A |
| PHILIPS CD-473 | TDA1541 |
| PHILIPS CD-480 | TDA1543 |
| PHILIPS CD-482 | TDA1543 |
| PHILIPS CD-581 | TDA1541 |

| | |
|--------------------------|----------------------------|
| PHILIPS CD-582 | TDA1541 |
| PHILIPS CD-604 | TDA1543 |
| PHILIPS CD-610 | TDA1543 |
| PHILIPS CD-614 | TDA1543 |
| PHILIPS CD-615 | TDA1543 |
| PHILIPS CD-620 | TDA1541 |
| PHILIPS CD-624 | SAA7323 |
| PHILIPS CD-630 | TDA1541 |
| PHILIPS CD-634 | SAA7321 |
| PHILIPS CD-640 | TDA1541 |
| PHILIPS CD-650 | TDA1541 |
| PHILIPS CD-670 | TDA1541 |
| PHILIPS CD-721 | TDA1545A |
| PHILIPS CD-723 | TDA1545 |
| PHILIPS CD-750 | SAA7350 (vagy TDA1549) |
| PHILIPS CD-751 | TDA1549 |
| PHILIPS CD-753 | TDA1549 |
| PHILIPS CD-782 | TDA1541 |
| PHILIPS CD-820 | TDA1541A |
| PHILIPS CD-824 | SAA7321GP |
| PHILIPS CD-850 | TDA1541 |
| PHILIPS CD-880 | TDA1541A S1 (single crown) |
| PHILIPS CD-910 | SAA7341GP |
| PHILIPS CD-911 | SAA7341GP |
| PHILIPS CD-930 | SAA7350 |
| PHILIPS CD-931 | SAA7350 |
| PHILIPS CD-940 | SAA7350S |
| PHILIPS CD-950 | TDA1547 |
| PHILIPS CD-951 | TDA1547 |
| PHILIPS CD-960 | TDA1541 |
| PHILIPS CDC-486 (6 disc) | TDA1543 |
| PHILIPS CDR-950 | AD1855 |
| PHILIPS DAC-960 | TDA1541A |
| PHILIPS LHH-100 | TDA1547 |
| PHILIPS LHH-500 | TDA1547 |
| PHILIPS LHH-600 | TDA1547 |
| PHILIPS LHH-800 | TDA1547 |
| PHILIPS LHH-1000 | TDA1541 |
| PHILIPS MAGNAVOX CDB-560 | TDA1541 |

| | |
|--------------------------|------------------------|
| PHILIPS MAGNAVOX CDB-650 | TDA1541 |
| PINK TRIANGLE NUMERAL | TDA1305T |
| PIONEER DV-717 | PE8001A |
| PIONEER PD-52 | PD2028 |
| PIONEER PD-75 | PD2028A (vagy PD2028B) |
| PIONEER PD-77 | PD2028B |
| PIONEER PD-93 | PD2028A |
| PIONEER PD-95 | PD2028A (vagy PD2028B) |
| PIONEER PD-204 | PD2026B |
| PIONEER PD-4500 | PCM1700 |
| PIONEER PD-4550 | PCM1700P |
| PIONEER PD-5100 | PD0034 |
| PIONEER PD-5300 | PCM56 |
| PIONEER PD-5700 | PD2026A |
| PIONEER PD-7300 | PCM58P |
| PIONEER PD-7700 | PD2026A |
| PIONEER PD-8500 | PCM63P |
| PIONEER PD-9300 | PCM58 |
| PIONEER PD-9700 | PD2028A |
| PIONEER PDR-04 | AKM4321 |
| PIONEER PDR-609 | PCM1716 |
| PIONEER PDR-W739 | PCM1716 |
| PIONEER PDR-W839 | PCM1716 |
| PIONEER PD-S06 | PCM1702J |
| PIONEER PD-S501 | PD2026A |
| PIONEER PD-S502 | PD2026B |
| PIONEER PD-S505 | PD2029A |
| PIONEER PD-S507 | PE8001A |
| PIONEER PD-S605 | PD2029A |
| PIONEER PD-S703 | PD2029A |
| PIONEER PD-S707 | PE8001A |
| PIONEER PD-S801 | PD2028 |
| PIONEER PD-S802 | PD2028B |
| PIONEER PD-S901 | PD2028B |
| PIONEER PD-S904 | PD2028B |
| PRIMARE CD31 | 4x PCM1704K |
| PRIMARE D20 | AKM4324 |
| PRIMARE D302 | 4x PCM1702 |
| PROCEED PCD2 | PCM58P |

| | |
|---------------------|-------------|
| PROTON AC423 | LC78820 |
| PROTON AC424 | TDA1311A |
| QUAD66 | TDA1541A |
| QUAD77 | CS4328 |
| REGA PLANET | PCM1710U |
| REVOX B225 | TDA1540 |
| REVOX B226 | TDA1541 |
| REVOX C221 | SAA7310 |
| ROKSAN ATTESSA DP3P | CS4328 |
| ROKSAN CASPIAN | TDA1305 |
| ROTEL RCD-02 | PCM1732 |
| ROTEL DCM-9PRO | PCM63 |
| ROTEL RCD-855 | TDA1541 |
| ROTEL RCD-856BX | SAA7323 |
| ROTEL RCD-865BX | SAA7323 |
| ROTEL RCD-870 | TDA1540 |
| ROTEL RCD-945AX | SAA7341GP T |
| ROTEL RCD-955AX | TDA1541A |
| ROTEL RCD-955 | TDA1541 |
| ROTEL RCD-961 | PCM1732U |
| ROTEL RCD-965BX | SAA7323GP T |
| ROTEL RCD-970BX | TDA1305T |
| ROTEL RCD-971 | PCM63 |
| ROTEL RCD-975 | TDA1305T |
| ROTEL RCD-991 | PCM63P |
| ROTEL RCD-1070 | PCM1732 |
| SANSUI CD V1000 | PCM56 |
| SANYO CP489 | LC7881 |
| SEG CD200 | YM3020 |
| SHANLING CD-T80 | PCM1738E |
| SHANLING CD-T80UK | PCM1738E |
| SHARP DX112 | IR 3K16BM |
| SHARP DX650 | LC7880 |
| SHERWOOD CD1 | TDA1547 |
| SHERWOOD CD1060C | D6372 CX |
| SHERWOOD CD1160R | PCM56 |
| SHERWOOD CD1192R | YM4113B |
| SHERWOOD CDC2000C | μPD6376 |
| SHERWOOD CDC2010RC | μPD6376 |

| | |
|-----------------------|---------------------|
| SHERWOOD CD4030R | SAA7350BS |
| SIMAUDIO MOON ECLIPSE | 4x PCM1704K |
| SONIC FRONTIERS SFCD1 | UltraAnalog D20400A |
| SONY CDP-40 | 1x PCM54 (S/H) |
| SONY CDP-101 | CX20017 |
| SONY CDP-222ES | PCM56P J |
| SONY CDP-222ESD | 1x TDA1541 |
| SONY CDP-227ESD | TDA1541 |
| SONY CDP-228ESD | PCM58P |
| SONY CDP-302ES | CX20152 |
| SONY CDP-303ESII | CX20152 |
| SONY CDP-313 | CXD2565M |
| SONY CDP-315 | CXD2565M |
| SONY CDP-333ESA | CXD2562 |
| SONY CDP-333ESD | TDA1541 |
| SONY CDP-333ESJ | CXD2562 |
| SONY CDP-337ESD | TDA1541 |
| SONY CDP-338ESD | 2x PCM58P |
| SONY CDP-497 | CXD2561 |
| SONY CDP-501ES | CX20017 |
| SONY CDP-502 | PCM54 |
| SONY CDP-502ES | CX20152 |
| SONY CDP-502ESII | PCM53JP-V |
| SONY CDP-520ESII | CX20152 |
| SONY CDP-552 | PCM54 |
| SONY CDP-552ESD | CX20152 |
| SONY CDP-553ESD | PCM53JP-V K |
| SONY CDP-555ESA | CXD2562 |
| SONY CDP-555ESD | TDA1541A |
| SONY CDP-555ESJ | CXD2562 |
| SONY CDP-557ESD | PCM58P |
| SONY CDP-620 | PCM54 |
| SONY CDP-650 | PCM54 |
| SONY CDP-701ES | CX20017 |
| SONY CDP-707ESD | PCM58P |
| SONY CDP-770 | PCM56P |
| SONY CDP-777ESA | CXD2562Q |
| SONY CDP-M95 | TDA1541 |
| SONY CDP-MS1 | CXD8594 + CXA8042AS |

| | |
|----------------------------|----------------------------------|
| SONY CDP-R3 + DAS-R1a | CXD2552Q + CXD2552 |
| SONY CDP-X229ES | CXD2562Q |
| SONY CDP-X3000 | CXD2562Q + CXA8042AS |
| SONY CDP-X303ES | CXD2562Q |
| SONY CDP-X5000 | CXD2562 + CXA8042 |
| SONY CDP-X505ES | CXD2562Q |
| SONY CDP-X33ES | CXD2552Q |
| SONY CDP-X55ES | CXD2552 |
| SONY CDP-X777ES | CXD2552BQ |
| SONY CDP-X779ES | CXD2562 |
| SONY CDP-X77ES | CXD2552 |
| SONY CDP-X7ESD | PCM58P S |
| SONY CDP-X900 | CXA8042 |
| SONY CDP-XA20ES | CXD8505BQ + CXA8042AS |
| SONY CDP-XA30ES | CXD2562Q + CXA8042AS |
| SONY CDP-XA50ES | CXA8042AS |
| SONY CDP-XA55ES | CXD8594Q + CXA8042S |
| SONY CDP-XA5ES | CXD2562Q + CXA8042AS |
| SONY CDP-XA7ES | CXD2562 + CXA8042AS |
| SONY CDP-XB920 | CXD8715 + CXA8355 |
| SONY CDP-XB720E | CXD8735N |
| SONY CDP-XB930 | CXD8735N |
| SONY CDP-XE300 | CXD8567 |
| SONY CDP-XE310 | CXD8567 |
| SONY CDP-XE330 | CXD2529Q |
| SONY CDP-XE900 | CXD8505 + CXA8055 |
| SONY CHC-P11 (mini hifi) | PCM1710U |
| SONY DAS-R1 | 2x TDA1541A S1 (single crown) |
| SONY PLAYSTATION SCPH-1002 | AKM AK4310VM or AK4310AVM (late) |
| SONY PLAYSTATION SCPH-5502 | AKM AK4310AVM |
| SONY PLAYSTATION SCPH-5552 | AKM AK4310AVM |
| SOUND WAVE CD1100 | LC7881 |
| SUDGEN OPTIMA | TDA1543 |
| SUDGEN SDA-1 | TDA1541 |
| SUDGEN SDT-1 | TDA1541A S1 (single crown) |
| T+A CD1210R | SM5864AP |
| TAG McLAREN CD20R | CS4329 |
| TALK ELECTRONICS THUNDER 3 | CS4390 |
| TASCAM CD201 | MN6474 |

| | |
|---------------------|-------------------------|
| TEAC CPD3450SE | YDC103 |
| TEAC PD155mk2 | Y3015 |
| TEAC PD160 | TC9218F |
| TEAC PD365 | YM7121B |
| TEAC VRDS 7 | SAA7350 |
| TEAC VRDS 8 | PCM1702 |
| TEAC VRDS 9 | PCM1702 |
| TEAC VRDS 10SE | TDA1547 |
| TEAC VRDS 25 | AD1862J |
| TEAC ZD5000 | PCM53 |
| TECHNICS SL-P1 | PCM53 |
| TECHNICS SL-P2 | PCM53 |
| TECHNICS SL-P50 | MN6474 |
| TECHNICS SL-P110 | PCM54HP |
| TECHNICS SL-P120K E | PCM54HP |
| TECHNICS SL-P272A | MN6474 |
| TECHNICS SL-P520 | MN6618A |
| TECHNICS SL-P555 | MN6471 |
| TECHNICS SL-P720 | MN6618A |
| TECHNICS SL-P770 | 2x PCM56P + 2x PCM56P-J |
| TECHNICS SL-P990 | 4x PCM56P-J |
| TECHNICS SL-P999 | 4x PCM56P-J |
| TECHNICS SL-P1200 | PCM54HP |
| TECHNICS SL-PG480A | MN662713 |
| TECHNICS SL-PJ28A | MN6477 |
| TECHNICS SL-PS670D | MN6474 |
| TECHNICS SL-PS700 | MN6474 |
| TECHNICS SL-PS770A | MN64733 |
| THETA DSP | PCM67 |
| THOMSON LAD300 | TD6720N |
| THULE CD100 | CS4303 |
| THULE SPIRIT | PCM1715U |
| TOSHIBA XR40 | TD6705AP |
| UHER UCD-210 | LC7882 |
| UNIVERSUM CD4682 | PCM56 |
| USHER CD-100 | PCM1732 |
| WADIA 23 | AD1865 |
| WADIA 850 | PCM1702 |
| WADIA 860 | 4x PCM1702 |

| | |
|-----------------|------------|
| WADIA 861 | 4x PCM1704 |
| YAMAHA CD-2 | PCM53 |
| YAMAHA CD-3 | PCM53 |
| YAMAHA CD-2000 | PCM54HP |
| YAMAHA CDX-3 | PCM54 |
| YAMAHA CDX-410 | PCM56 |
| YAMAHA CDX-420 | PCM56 |
| YAMAHA CDX-470 | YDC103 |
| YAMAHA CDX-480 | MN66271 |
| YAMAHA CDX-490 | MN66271R |
| YAMAHA CDX-580 | YAC514 |
| YAMAHA CDX-590 | YAC514 |
| YAMAHA CDX-593 | YAC514 |
| YAMAHA CDX-700 | PCM56 |
| YAMAHA CDX-810 | 2x PCM56J |
| YAMAHA CDX-880 | YAC514 |
| YAMAHA CDX-890 | YAC514 |
| YAMAHA CDX-893 | YAC514 |
| YAMAHA CDX-900 | PCM56 |
| YAMAHA CDX-993 | YAC514F |
| YAMAHA CDX-1100 | PCM56 |
| YAMAHA CDX-2020 | PCM58 |